Quality features

A fast and easy solution for getting the big picture to the place you want. The Grandview Fast Fold Screen includes a road case for easy transportation.

These screens are suited to big group events. They are ideal for schools and large corporate events.

This screen includes front projection fabric with the option of rear projection fabric. By using the rear projection fabric the projector is set up behind the screen.





GRANDVIEW®



Grandview Fast Fold User Manual

Nov 2009 V.1.0

To the owner

Congratulations on purchasing a Grandview Fast Fold Screen, designed to produce the most pleasing pictures with maximum convenience.

Protecting your screen

To ensure long lasting viewing enjoyment, always keep the screen rolled up in its protective case when not in use. Always examine both the front and back of surface before retracting the screen into its case to make sure it is free of dust, dirt, insects or foreign matter. Use a soft brush or cloth to gently remove any foreign particles.

Cleaning your screen

NEVER attempt to use any solvents, chemicals or abrasive cleaners on the screen. Use a mild detergent with warm water to remove any marks on the surface or screen case. Always immediately pat dry the screen with a soft cloth or towel after cleaning.

Do not rub screen image area

Note:

Grandview's warranty does not cover damage casued by incorrect assembly

Using your screen

Step 1

Ensure that your work area is clean and free of dirt,dust and foreign matter.

Step 2

Fully assemble the screen frame and lay it out on thefloor, partially collapsed, as shown.



Step 3

At each corner, secure the fabric, using four pressstuds along the top, bottom and the sides of the frame.

Step 4



Step 5

Secure the remaining press-studs to the frame. Slowly and carefully extend the sides of the frame and lock into position, then secure using the remaining press studs


Assembling the legs

Step 6

Unpack and extend the legs.



Set frame to desired height then extend legs accordingly and fasten with black knob

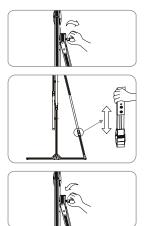

Your screen is now ready for your viewing enjoyment